

Serial Bluetooth RS-232 Adapter

Part no.: UCBT232B and UCBT232EXA



- Communication range up to 330 feet
- Multiple power options
- OS independent
- Android support
- Supports SPP (Serial Port Profile)
- Highly configurable by Terminal software
- LED indication lights
- Fast and user friendly setup

UCBT232B / UCBT232EXA Package Contents:

- RS-232 adapter x 1
- Battery power wire and connector x 1
- User manual x 1
- USB Cable x 1
- Di-pole antenna (UCBT232EXA only)

Power options:

The adapter can be powered by one of the following:

Mini USB cable (5VDC)

DB9 connector Pin 9 (5VDC)

External battery, we recommend Li-Ion batteries (3~5 VDC)

Default factory settings:

Baud rate: 19200 bps

Data bit: 8

Parity: none

Stop bit: 1

Flow control: none

Mode: Slave

Bluetooth PIN code: "1234"

These settings can be configured via Tera Term or Purr. Please see the 'Setup Guide' and below parameter table for details.

NORDFIELD

Specialists in Serial

Communication. With over 15 years of experience in the field we can solve most serial problems.

PRODUCTS

Large selection of Serial RS232, RS485 and RS422 converters, USB to Serial adapters, Isolators, Ethernet to Serial converters, Serial Repeaters, Wireless Serial modules, Serial Bluetooth adapters and Serial Port Cards.

TECHNICAL SUPPORT

To access technical support, please visit www.NordField.com

where you will find:

- Latest drivers and updates
- Technical tips
- Documentation
- Configuration support
- and much more...

Feel free to contact our technical support team at

mail@usconverters.com



NordField
ELECTRONICS

105 Stations West Drive
Sedona, AZ 86336, USA
www.NordField.com
mail@NordField.com

SPECIFICATIONS	
Model number	UCBT232B
Recommended OS	Independent of OS
Processor	CSR BC04
Serial interface	RS232 (TX and RX), Female D-Sub 9-pin
Baud rates	1200, 4800, 9600, 19200, 38400, 57600, 115200
Stop bits	1 or 2
Data bits	7 or 8
Parity	None, odd, even
Operating distance	Up to 330 feet (100 meters)
Bluetooth stack	Serial Port Profile (SPP)
PIN	PIN code available for pairing
Flow control	CTS/RTS configurable by software
NMEA 183 compatible	Yes
Can pair while serial interface receives data	Yes
Full duplex RS232	Yes, can send and receive simultaneously both when connected over Bluetooth and when used in pairs.
Parameter configuration	Through the serial port or over Bluetooth
Bluetooth standard	V2.0 Class 1, + EDR
Frequency range	2.4GHz at 2.4835 GHz ISM Band
Hopping	1.600/sec, 1MHz channel space
Modulation	GFSK-1, DQPSK-2, 8-DPSK-3 Mbps
Tx power	Max. 18dBm (class 1)
Rx sensitivity	-86 dBm typical
Antenna	Internal chip
Antenna gain	max 1 to 2 dBi
DEC/DTE	Manual switch
Power	+5 to 5.5VDC powered by: Option 1: USB cable (included) Option 2: Pin 9 on DB9 connector Option 3: External battery (not included) Option 4: Mini USB adapter
Current draw	Max 90mA
Indication LEDs	TX, RX and Power
Operating temp.	-20C ~ 75C
Dimensions	35 x 45 x 15 mm
Certifications	CE, FCC
Warranty	2-year Limited Warranty
ECCN	4A994.a
Schedule B	8471.80.1000
HTS	8517.18.0050

NORDFIELD

Specialists in Serial Communication. With over 15 years of experience in the field we can solve most serial problems.


PRODUCTS

Large selection of Serial RS232 RS485 and RS422 converters USB to Serial adapters, Isolated Ethernet to Serial converters, Serial Repeaters, Wireless Serial modules, Serial Bluetooth adapters and Serial Port Cards

TECHNICAL SUPPORT

To access technical support, please visit www.NordField.com where you will find:



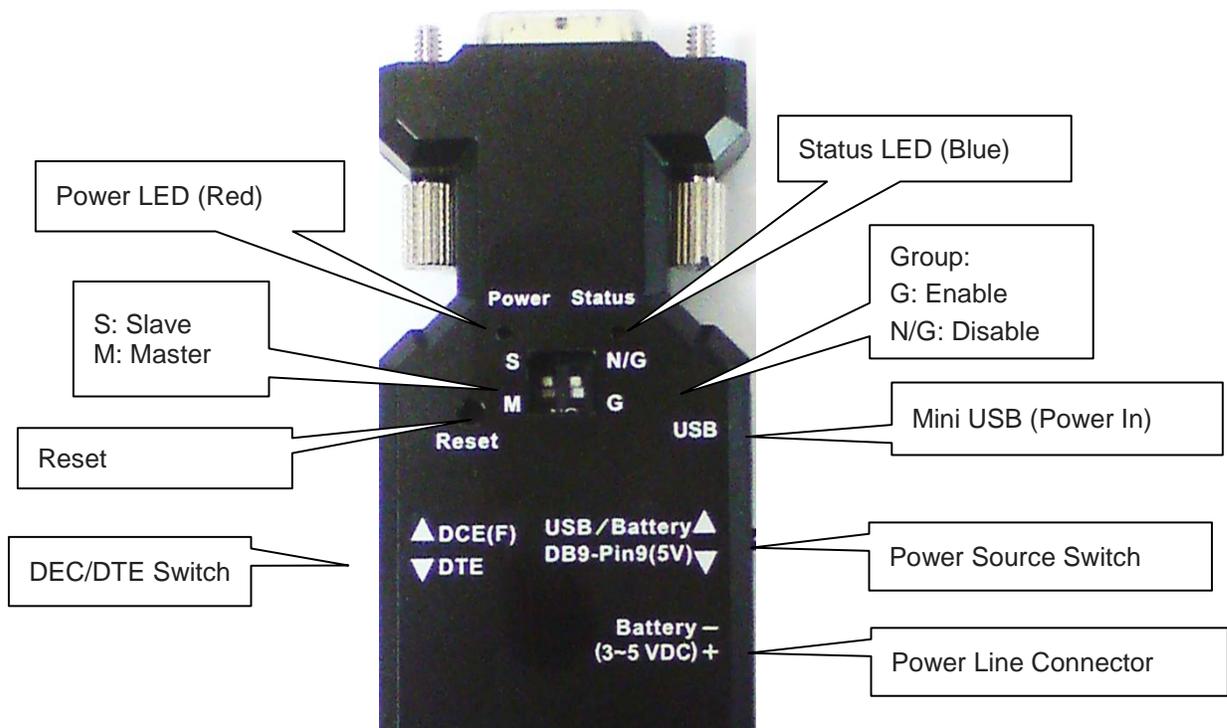

Reset Button:

Short press: The adapter disconnects and then reconnects a wireless link
 Long press (more than 3 sec.): Restores factory settings

DTE/DCE switch

Use the slide switch to swap between DTE and DCE.

Master / Slave DIP switch:

The adapter can be set either as a slave or a master. The master and slave will then automatically link without pairing. The 'ROLE' and 'Auto' commands are disabled when using the DIP switch Master/Slave function.

Group (G) / No-Group (N/G) DIP switch:

In combination with the Master/Slave DIP switch the Group / No-Group DIP switch will allow you to connect to one slave in a group of slaves with the 'CONNECT' command. This can be convenient if you need to switch between different slaves in the coverage area.

LED Status	Description
Power LED on	The power input is equal or larger than 3.5 Volt, (can be checked with the "DETECT" command)
Power LED (0.5 sec) blinking	The power input is lower than 3.5 Volt, (can be checked with the "DETECT" command)
Link LED off	No pairing
Link LED fast (0.1 sec) blinking	Pairing (slave or master mode)
Link LED fast (0.3 sec) blinking	Discoverable and waiting for a connection (slave mode)
Link LED slow (0.9 sec) blinking	Inquiring (master mode)
Link LED very slow (1.2 sec) blinking	Connecting (master mode)
Link LED steady on	Connection established

Parameters.

The parameters can be configured via the DB9 RS232 serial port or over Bluetooth (unless you set the adapter to Command Mode). Tera Term or Hyperterminal which can be downloaded from www.nordfield.com is recommended for configuring the parameters. Please see the 'Setup Guide' for details.

Note 1: Commands should be typed in either all CAPITAL letters or all lowercase letters.

Note 2: Commands cannot be received by the adapters if they are paired/linked.

Command	Value	Description
<<<		Change the local adapter from "Data mode" to "Command mode". A minimum of 500ms silence must appear before the command. The command will be unavailable if data pass through within 1 second after entering the command. The time interval between each entered characters should be: [500ms] "<" [500ms] "<" [500ms] "<" [1500ms]
<<<=	?	Inquire the setting status of the "<<<" command.
	Y	Enable the "<<<" command
(Default)	N	Disable the "<<<" command
>>>		Change the remote adapter from "Data mode" to "Command mode". A minimum of 500ms silence must appear before the command. The time interval between each entered characters should be: [1 sec] ">" [1 sec] ">" [1 sec] ">" [2 sec]
>>>=	?	Inquire the setting status of the ">>>" command.
	Y	Enable the ">>>" command
(Default)	N	Disable the ">>>" command
ADDRESS=		This command is used to display the Bluetooth address of the local adapter.
	?	Inquire the Bluetooth address of the local adapter.
AT		Checks the connection status between control terminal and the RS-232 adapter. Response: "OK" when the connection is ok. "ERROR" when the connection is unsuccessful.
AUTO=		This command is used to enable/disable the auto-connection feature. It is available only when the adapter is in Master mode and only when DIP=N. The system will not re-start after changing this parameter.
	Y	Master and Slave will connect automatically.
(Default)	N	Master and Slave will need to be connected manually with the 'CONNECT' command.
	?	Inquire the current setting.
BAUD=		This command is used to specify the baud rate of the COM port. The command will need 200 ms delay.
	1200	1200 bps
	2400	2400 bps
	4800	4800 bps
	9600	9600 bps
(Default)	19200	19200 bps
	38400	38400 bps
	57600	57600 bps
	115200	115200 bps
	230400	230400 bps
	460800	460800 bps
	921600	921600 bps
	R	Restore the default settings. (Baud rate =19200 bps)
	?	Inquire the current baud rate.
CONNECT=		This command is used to establish a connection manually. It is available only when the adapter is in the Master role.
	DEVICE	Connect the adapter to a specified Bluetooth device manually. It is available only when "DEVICE=xxxxxxxxxx" is executed.
	1~8	Connect the adapter to a Bluetooth device in the neighborhood found through "SEARCH=?"
	xxxxxxxxxx	Connect the remote adapter by typing the MAC address directly without searching.

	?	Display the MAC address of the latest paired device.
	Y	Recover the latest connection in the command mode.
	N	Disconnect the two adapters in the command mode
	P	Connect the previous connected adapter.
DEFAULT=		This command is used to restore the default settings and originate a warm start.
	Y	Restore the default settings (e.g. 19200 bps). The command will re-start the system for 1 second.
DETECT=		The command is used to detect the voltage of the power supply and set the alert value of low power.
(Default)	N	Disable the voltage detection
	Y	Enable the voltage detection
	R	Restore the default value (3.5 Volt)
	x.x	Setup the range of voltage detection from 3.0 to 3.7 Volt. The "x" indicate the number.
	?	Inquire the setting status
DEVICE=		For security purpose, this command is used to specify a unique remote Bluetooth serial adapter to be connected. In the Master mode, the adapter pairs and connects with the designated remote slave address. If the adapter is in the Slave mode, this command is a filter condition to accept the inquiry of the Master device.
	xxxxxxxxxxx	"xxxxxxxxxxx" is a string of 12 hexadecimal digits.
	R	Restore the status in which the adapter can connect with any remote address.
	?	Inquiry the designated address that can be paired and connected.
DFU=		Device Firmware Upgrade
	Y	
DIP=		Enable / disable the DIP switch.
	?	Inquire the setting status of the DIP switch function.
	Y	Enables the DIP switch. The "ROLE" and "AUTO" commands are not available to set the "Master" or "Slave".
(Default)	N	Disable the DIP switch. The "ROLE" and "AUTO" commands are available when the DIP=N.
DISCOVER=		This command is used to specify whether the adapter can be discovered or connected by remote devices. This command is available only when the adapter is in Slave mode.
	N	The adapter enters the discoverable mode. If a pair has been made, the original connection can be resumed. But other remote master device cannot discover this adapter.
(Default)	Y	The adapter enters the discoverable mode.
	?	Inquire the current setting.
ECHO=		This command is used to specify whether the adapter echoes characters received from the UART back to the DTE/DCE.
	N	Command characters received from the UART are not echoed back to the DTE/DCE.
(Default)	Y	Command characters received from the UART are echoed back to the DTE/DCE.
	?	Inquire the current setting.
FLOW=		This command enable or disable flow control signals (CTS/RTS) of the UART port. Note, the setting is not affected by DEFAULT. The command will need 1 second delay.
(Default)	N	Disable flow control.
	Y	Enable flow control.
	?	Inquire the current setting
NAME=		This command is used to specify a name for the adapter. You can specify a friendly name using 0 to 9, A to Z, a to z, space and -, which are all valid characters. Note that "first space or -, last space or - isn't permitted". The default name is "Serial Adapter".
(Default)	Serial Adapter	Default device name
	xx...xx	"xx...xx" is a character string with the length from 2 to 30.


	R	Restore the default settings name="Serial Adapter".
	?	Inquire the name of the local adapter.
PARITY=		This command is used to specify parity bit setting of COM port. The command will need 200 ms delay.
(Default)	N	None parity bit
	O	Odd parity
	E	Even parity
	?	Inquire the current setting.
PIN=		This command is used to specify a PIN. The default PIN is "1234". Paired adapters should have a same PIN. This command is used to specify a PIN. The default PIN is "1234" and the length is not smaller than 4. Paired adapters should have a same PIN. The PIN code includes the numeral and English characters.
(Default)	1234	
	xx....xx	"xx....xx" is a 4~16 digit string or English character (in capital or lower case)
	N	Cancel authentication by PIN.
	R	Restore the default settings PIN="1234".
	?	Inquire the current PIN.
PROMPT=		The command is used to decide whether result messages are prompted when Setup commands are executed. The result messages are: OK/ERROR for command execution, or CONNECT/DISCONNECT/Try Connect Device for connection status.
(Default)	Y	Prompt result messages.
	N	Not prompt result messages.
	?	Inquire the current setting.
RECONNECT=		The command is used to re-connect the lost link for the Master adapter.
	?	Inquire the current setting.
(Default)	Y	Re-connect is disable
	N	Re-connect is Enable
ROLE=		This command is used to specify whether the adapter is in the master or slave mode. If the device mode is changed, the adapter will reboot and all paired addresses will be cleared. The command is available when the adapter is in DIP=N status. The command will need 1 second delay.
	M	Set the adapter to the master mode.
(Default)	S	Set the adapter to the slave mode.
	?	Inquire the current mode of the adapter.
RSSI=		Received signal strength indication
	?	Display the Received signal strength indication in command mode when connected. 1. Strong: RSSI>-9 2. Medium: -9>RSSI>-20 3. Weak: RSSI<-20
SEARCH=		This command is used to search for any Bluetooth device in the neighborhood within one minute. If any device is found, its name and its 12-digit-address will be listed. The search ends with a message "Inquiry ends. xx device(s) found." This command is available only when the adapter is in the master role by manual.
	?	Inquire Bluetooth devices in the neighborhood, listing 8 devices the maximum
STATUS=		Inquire all the current setting of the adapter.
	T	Inquire the inner temperature of the IC in centigrade
	?	Display the current setting of the adapter
STOP=		This command is used to specify one or two stop bits of COM port. The command will need 200ms delay.

(Default)	1	One stop bit.
	2	Two stop bits.
	?	Inquire the current setting.
VERSION=		This command is used to inquire the firmware version.
	?	Inquire the version codes.

Some commands are unavailable under certain conditions:

If this command is set	These commands are unavailable
ROLE=S	SEARCH=?, CONNECT=?, CONNECT=P, CONNECT=xxxxxxxxxx, CONNECT=DEVICE
AUTO=Y	SEARCH=?, CONNECT=?, CONNECT=P, CONNECT=xxxxxxxxxx, CONNECT=DEVICE
DIP=Y	ROLE=M, ROLE=S, AUTO=Y, AUTO=N, DISCOVER=Y, DISCOVER=N
<<<	SEARCH=?, CONNECT=?, CONNECT=P, CONNECT=xxxxxxxxxx, CONNECT=DEVICE, DFU=Y
>>>	SEARCH=?, CONNECT=?, CONNECT=P, CONNECT=xxxxxxxxxx, CONNECT=DEVICE, DFU=Y
Not connected	RSSI=?, CONNECT=Y, CONNECT=N

RS232 Interface:

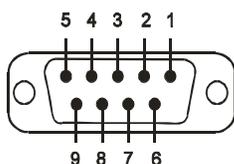

Pin	Signal	DTE Direction	DCE Direction	Description
1	CD	Input	Output	Not connected
2	TxD	Output	Input	Transmitted data
3	RxD	Input	Output	Received data
4	DSR	Input	Output	Not connected
5	GND	N/A	N/A	Signal ground
6	DTR	Output	Input	Not connected
7	CTS	Input	Output	Clear to send
8	RTS	Output	Input	Request to send (Default)
9	Vcc	Input	Input	Power supply (5VDC, 1.5A Max.)

Remarks: The default hardware flow control is CTS/RTS.